



JP1 Input selection
 Open: RS232 (OTRSP)
 Close: BCD

JP2 - Number of antennas
 Open - 8 Antennas
 Close - 7 Antennas (2x4 Relays Boxes)
 Relay8 always On for Antennas 4-7

JP3 - Radio selection
 2-3 - Radio1 (AUX1)
 1-2 - Radio2 (AUX2)
 no jumper - Radios 1+2
 (AUX1+AUX2)

(c) Marek, SP7DQR
 marek@sp7dqr.pl
<http://sp7dqr.pl>